

I.Switches and Ports:-

As shown in Figure-1, the nomenclature of the Ezioport is as described below:

1. **Charging Port**-Use recommended charging adapter i.e., 9V/2A.
2. **ON/OFF Switch**-Toggle the switch to turn the device ON and OFF.
3. **Micro SD Card Port**-Local data storage upto 32Gb.
4. **Pollution Sensors**-Two sensors are placed to take PM1.0,PM2.5,PM10 value.
5. **Temp. & Humidity Sensor**-This sensor gives Humidity and Temperature value.
6. **Charging LED**-It shows the status of charging.
7. **Status LED**-This shows the different colour for different status.
 - Red indicates an issue with SD card and 4G module.
 - Green indicates the data is logging properly in SD card and 4G module is also working fine.
 - Yellow indicates an issue in SD card along with indication of 4G module working.
 - Blue indicates SD card is working fine & 4G module is in network searching mode.


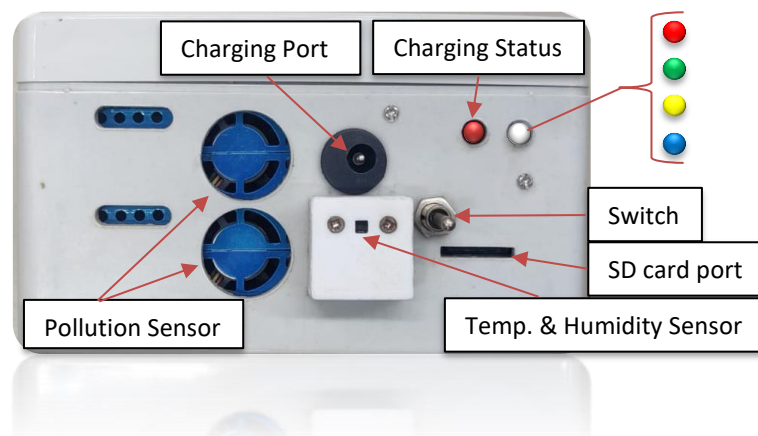



Figure-1 Ezioport Front view

II. Steps to add ezioport device in your account:-


1. Open the Ezioport app and click on “Log in via Goggle”.

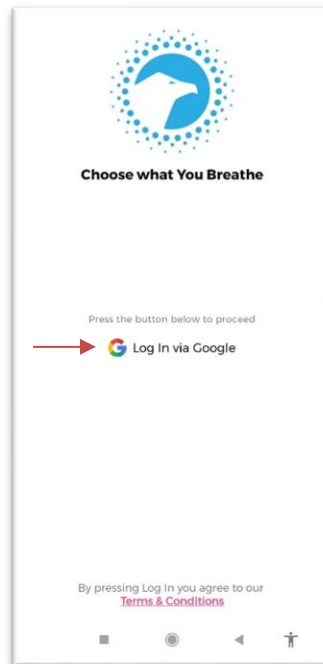

2. Allow all the desired permissions.

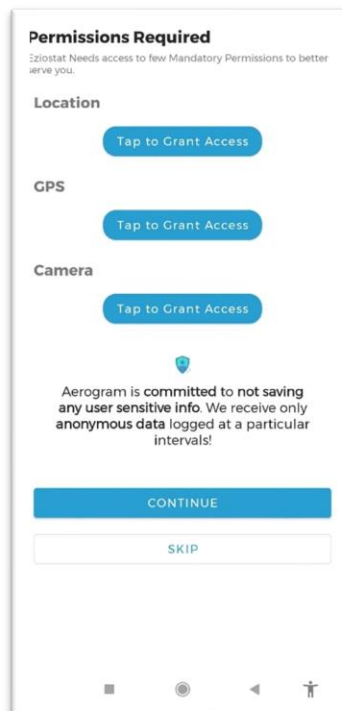

3. Click on + icon to add device

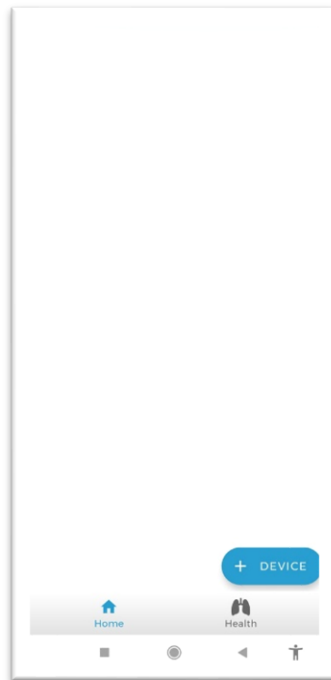


4. Scan the QR code from the top of the device (as shown in Figure-2) and click on proceed.





Figure-2 Ezioport Top view

5. Click on the Registered.

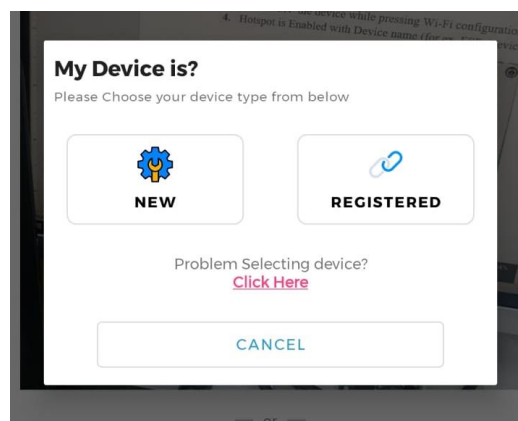

6. Enter the name for your device.

Please fill the details below


Name


Ezioport-1

Give your Device a Name



SUBMIT


7. Your device is successfully registered.

 **Ezioport-1**

 G5VQ+63G, IIT Campus, Block E, Hauz Khas,
New Delhi, Delhi 110016, India

Lat: 28.5429528 Lng: 77.1875196

 Home  Health

 + DEVICE

8. Now, we can check the real time data of your device.

